




Installation instructions for ATP OEM Style Billet Battery Tray

1. Remove the OEM battery tray and clean out threaded hull inserts.
2. You will need to remove some material from the original tray supports, just take enough off to make level with threaded inserts.

From this

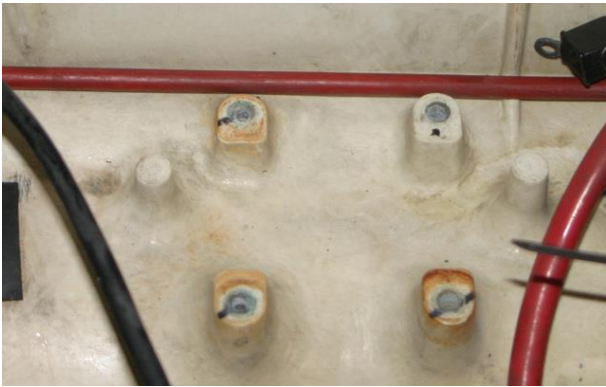

To This



3. Fit the OEM Battery straps onto the side of the tray nearest to the hull, remember the hook on one end needs to face towards the petrol tank.



4. Tighten bolts supplied securing tray in place.
5. Attach petrol tank strap to the corresponding hook then place a small piece of Hydro Turf or similar between hook protrusion and Petrol tank, this can be glued in place if required.
6. Using the rubber base from the OEM Battery Tray cut to size and place in bottom of your new tray, replace battery and secure with OEM straps.



DISCLAIMER

You the purchaser accept ALL responsibility for any conceivable damage caused whilst installing this product. Inexperienced persons may wish to peruse professional guidance from a qualified person before attempting installation of this product. These instructions have been prepared as guidelines for experienced users of the tools and materials needed for the installation of this product. The owners and manufactures of Air Time Products cannot be held accountable for any injury resulting from the use, misuse or misapplication of this product. For competition use only.

If at any time before or during this installation you have any problems or questions do not hesitate to call us

0116 260 1965

Copyright © 2004-2017 Queenford Leisure. ALL RIGHTS RESERVED.